


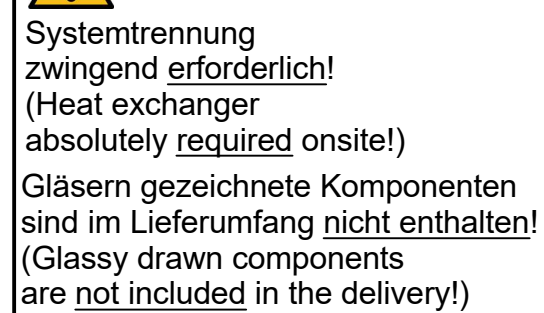

Ersatzteilliste (spare part list)			
Pos.	Anz.	T.-Nr.	T.-Bez.
1	1	000 016	R3MHLT__S
2	1	000 144	R4MR22S__HLTS
3	1	000 125	R1MAR17RM__HLTS
4	1	000 145	R4MR22M__HLTS
5	2	000 147-R	R5MHLTS-R
6	1	000 200 B	TMH Gehäuse B DN25 SYS Entladung R
7	1	000 122	OR Ø30xØ2,5 PTFE95
8	1	000 622-R	KüEin TMH DN25 jet+sys-R
9	3	000 551	S M6x10 6KF
10	1	000 626-R	EMS 240 3P-R
11	1	000 251	SchF Ø5,3xØ10x0,6
12	1	000 250	SchU Ø5,3xØ10x1
13	1	000 249	S M5x50 Zy-6K
14	1	000 035	Stellknopf S240
15	2	000 598	Spritze mit Wärmeleitpaste
16	13	000 012	DF Ø32xØ44,9x2 EPDM
17	1	000 108	DF Ø24xØ30x2 EPDM
17	6	000 030	KuHV DN25 G1½(i)xRp1
19	1	000 010	RVP32-NV 10mbar Kvs26
20	1	000 109	RVP20-OV 50mbar Kvs8,8
21	1	000 185	IsoBoden 450
22	1	000 065	IsoDeckel 450 ohne
23	2	000 057	IsoStopfen
24	1	000 056	IsoDom rMIX 250
25	2	000 069	Montageschiene 450mm
26	6	000 048	ScheR Ø35(i) M8
27	8	000 070	S M8x8 Li-6K
28	2	000 062	MEin M8x22x11
29	1	000 071	Schl 6KSW4 71x25
30	6	000 118	The 0-120°C Ø63 14,8x13,8
31	1	000 238	OR Ø26,0xØ3,0 NBR
32	6	000 600	IsoRohr Ø15x9
33	1	000 599	KF-GS
34	1	000 751-R	KF-Sync240-Entladung-R
35	1	000 074	Montagesatz Kleinteile

